

Service Bulletin



January 19, 2006

Applies To: 2005-06 RL - ALL 2002-06 RSX - ALL 2004–06 TL – ALL 2004-06 TSX - ALL

## Front Subframe Removal Adapter

The front subframe removal adapter is a required tool. When properly fitted to a transmission jack and the vehicle's front subframe, the adapter provides a convenient way to remove the subframe. Front subframe removal is required for transmission or engine removal.

NOTE: The adapter supports only the subframe, it does not support the entire powertrain assembly. Refer to the WARNING label on the adapter.



## **ORDERING INFORMATION**

The front subframe removal adapter is T/N VSB02C000016. To order, call the Acura Tool and Equipment Program at 888-424-6857.

## **USING THE ADAPTER**

NOTE: The adapter is designed to be used with the new transmission jack, model number NRI-72500D, available through the Acura Tool and Equipment Program (call 888-424-6857). (The old transmission jack model number LSL-W93714 can still be used). The adapter also works with many commercially available transmission jacks.

1. Loosen the four bolts that hold the adapter's adjustable arms to its center plate.

2. Line up the slots in the arms with the bolt holes on the corners of the jack base, then attach the adapter to the jack base with the bolts that came with the jack. Tighten all of the bolts securely.



- 3. Raise the jack to vehicle height.
- 4. Adjust the rear stops to the width of the subframe. Loosen the wing nut. With the rear bar of the adapter spanning the sides of the subframe, route the adapter's strap around the front of the subframe. Pull the strap as tightly as possible, insert the pin through the appropriate loop, then tighten the wing nut.
- 5. With all of the vehicle parts properly supported or removed (see Engine or Transmission Removal in the appropriate service manual), use the controls on the jack to carefully lower the subframe.

© 2006 American Honda Motor Co., Inc. - All Bights Reserved

R

REPAIR

BTB 31649 (0601)

1 of 1

CLIENT INFORMATION: The information in this bulletin is intended for use only by skilled technicians who have the proper tools, equipment, and Skill Level training to correctly and safely maintain your vehicle. These procedures should not be attempted by "do-it-yourselfers," and you should not assume this bulletin applies to your vehicle, or that your vehicle has the condition described. To determine whether this information applies, contact an authorized Acura automobile dealer.