




CONTROLS AND FEATURES

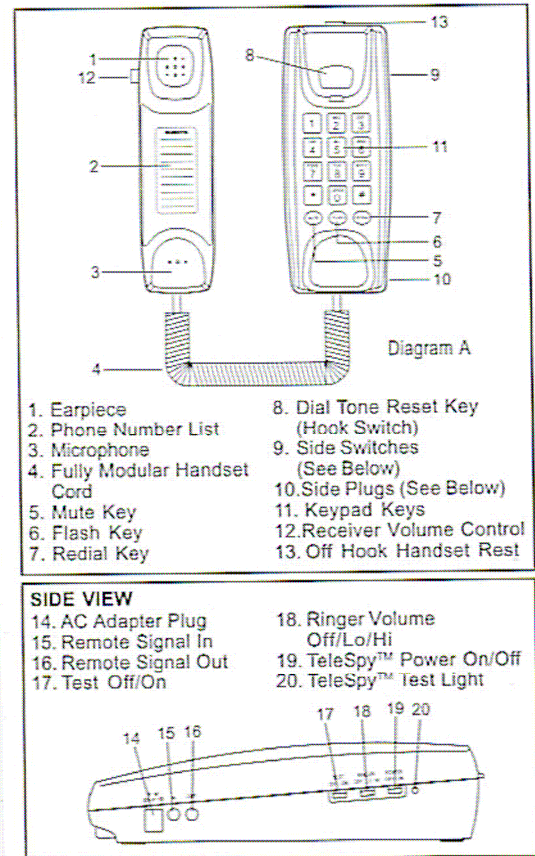

INSTALLATION

Plug AC adapter into phone and into conventional AC 120V wall outlet.


Coil Cord Connection

Insert one end of the coil into modular jack located on the side of the base. Connect the other end into the modular jack located on the handset.

Line Cord Connection

With a modular telephone system, connect the straight telephone line cord to the modular jack located on the bottom of the base. Insert the other end of cord into a modular wall jack. Make sure all plugs snap firmly in place (see Diagram B).

With a four prong style jack, simply use a plug in modular adapter (see Diagram C).

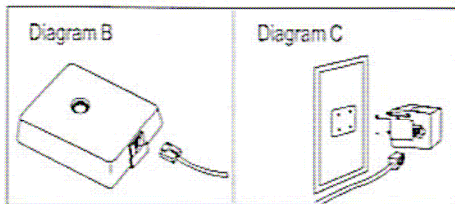

OPERATION

The TeleSpy™ operates as a regular telephone. Calls are received and sent normally. Using the TeleSpy™ as an intrusion detector:

1. Lift the handset.
2. Listen for dialtone.
3. Enter the telephone number to be dialed in the event if an intrusion. (This number is now entered in the re-dial memory.)
4. Hang up telephone.
5. Turn the TeleSpy™ power on.(19).
6. Re-dial sequence begins. Re-dialed number rings. Recipient can answer call, or not, after 60 seconds the TeleSpy™ is operational.
7. To deactivate, turn TeleSpy™ power off.(19)

Testing the TeleSpy™ telephone system

The "test" function allows the user to discover the timing, sensitivity, and distance parameters of the TeleSpy™.

1. Test switch to "on" position.(17)
2. Operate TeleSpy™ as directed.(Page 4)
3. LED "test" light will come on during "off hook" function, "off hook function" shows instant of detection and moment of TeleSpy™ listening cycle disconnection.

Last Number Redial

Your TeleSpy™ telephone system remembers the last number dialed. If the number you dial is busy or not being answered, hang up. If you want to redial the last number automatically, press the REDIAL button.

NOTE: You can redial the same telephone number as many times as required. However, once you dial another number the previous number is erased.

Ringer Off/Low/High

Your TeleSpy™ telephone system features a harmonic ringer which can be adjusted to a loud (high) or soft (low) sound level. When you don't want to be disturbed. Slide the switch to the "OFF" position. You can still make outgoing calls without being disturbed by incoming calls.

Receiver Volume Control

The receiver volume control is located on the side of your handset. This enables you to adjust the receiver volume on your telephone handset from normal to high for a more comfortable listening level.

Flash

The FLASH key can be used to retrieve a new dial tone after ending a call.

NOTE: The FLASH key is also a useful feature for special telephone services such as call waiting and three party calling. Press briefly, release and perform the custom call procedure.

Mute

To talk to someone on your end of the phone without the caller hearing your conversation, press and hold the MUTE key. To resume your telephone conversation, release the MUTE key.