


## MP3 Watch Instructions

### Key Definition:

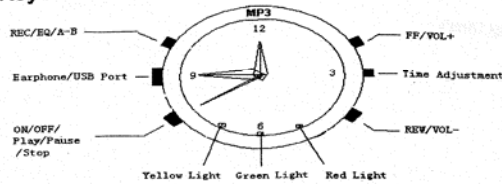

### Charging

The built-in battery can be charged either by USB or A/C transformer. When properly connected to the charger, red light is on. When the battery is full, the light will turn to green. (Charging time approx. 1 hour)

- Note: When the red light keeps flashing, it means low-battery.

### Operation Instruction

#### 1. Turn On/Off

- (1) **On:** Press and hold "■/▶" key about 2 seconds, wait until green light shows.
- (2) **Off:** Press and hold "■/▶" key about 3-5 seconds, wait until red light disappear.

#### 2. Playing switch between MP3 file and recording file

Press "◀/VOL+" or "▶/VOL-" to switch mode for playing MP3 file or recording file. The indicator light will be green when in MP3 mode, and be yellow when in recording mode.

#### 3. Play/Pause /Stop

- (1) **Playing MP3 file:** Press "■/▶" button once. Indicator light will become green when it's playing.
- (2) **Playing record file:** Firstly, click "◀/VOL+" or "▶/VOL-" button to switch to record mode. Secondly, click "■/▶" button to play the recording file.
- (3) **Pausing:** Press "■/▶" button once.
- (4) **Stop:** Press and hold "■/▶" button until the indicator light turns red. After 3-5 sec., it will turns off automatically.

#### 4. Track selection

Press "◀/VOL+" forward to the next track; press "▶/VOL-" to play back.

#### 5. Volume Adjustment

Press and hold "◀/VOL+" to increase volume; press and hold "▶/VOL-" to decrease volume.

#### 6. EQ Mode

Press and hold "EQ/REC" to adjust the EQ modes. (**Normal, Pop, Classic, Rock and Jazz**)

#### 7. Repeat

Press "EQ/REC" key, now the indicator light turns to yellow. Next, set A as start point and press the key once more to set B as end point. To cancel, press "EQ/REC" once again.

#### 8. MIC Recording/ LINE-IN Recording

- (1) **MIC Recording:** Press "◀/VOL+" to recording mode (yellow indicator light is on). Press "EQ/REC" button once to start recording. When starting records, the indicator light will become flashing.
- (2) **LINE -IN:** Firstly, connect the watch to audio device. Secondly, press "EQ/REC" button. When start recording, the indicator light will become flashing.
- (3) **Stop Recording:** Press "EQ/REC" key button, once to stop recording. Press "EQ/REC" again to re-start recording.
- (4) **Saving:** When recording, press "EQ/REC" button once. The file will be saved automatically.

#### 9. Memory function

The playing list, EQ mode and volume status, will be saving automatically when its switch off.

## 10. Delete Files

Firstly, press and hold "EQ/REC" button, switch to delete mode. (All the indicator lights will start flashing).

Secondly, press "■/▶" button to delete file.

Thirdly, press and hold "◀/VOL+" or "▶/VOL-" back to playing mode.

- Note: Recording file - Yellow light shows.  
MP3 file - Green light shows

## 11. Copy files

Same method as flash memory U disk.

## Driver Installation

1. No driver installation is needed if the operating system is above Win 98 interface
2. Win 98 interface
  - (1) Connect MP3 watch to the computer through its USB port; the PC will indicate that a new hardware device is found.
  - (2) Win 98 interface of PC will show finding a new hardware, then according to the shown to install.
  - (3) When finished the installation, and double click "My Computer" and you will find a "Removable Hard Disk" icon.

## Computer Connection

1. After connected, you can find the "Removable hard disk" in "My Computer"
2. Download musical files to MP3 player:
  - (a) Support musical files of MPEG1/2, Layer 3. Compression rate: 32kbps to 256kbps
  - (b) You can copy documents or MP3 music files from "My Computer" to "Removable Hard Disk" directly.
  - (c) When downloading or copying files the red light flash. When it's complete, the light will stop flashing. (The green right is on when the battery is full).
- Note: Do not disconnect the USB cable when the red light is flashing. Otherwise, the data may be destroyed.
3. Upload files to computer
  - (1) Recorded MP3 file can be transfer and play in the computer.
  - (2) MP3 player can also be used as flash memory U disk.

### Specifications

Memory Unit	Built-in 64M/128M/256M/512M/1G/2G Flash Memory
Support format	MP3 (MPEG 1/2, Layer3)+U DISK
Port	4 Pin USB round port
Battery	Built-in Hi Li-ion rechargeable 170mAh/3.7V battery
Battery Life	More than 9 hours continuous playing time when fully charged
High quality record	Recording file save in VOIC by WMA format, LINE-IN file saved in LINE-IN by WMA format too.
USB Transmission Rate	USB2.0
MP3 Compression Rate	32Kbps to 256Kbps
Output Frequency Rate	20Hz to 20KHz
SNR	≥90dB
Earphone Output	8MW+8MW (16Ω)
Operating Platform	Window98/Me/NT/2000/XP/Mac 8.6 or above

## Attention

- Connect USB with MP3 before connect to the computer. When download finished, you must disconnection USB with computer first, then disconnect USB with MP3.
- In this instructions press and hold means press one key about 2 seconds then releases; press once means press one key about 1 second then releases.
- The cover of earphone and MIC record orifice must be closed so that it can be waterproof. Otherwise, is useless. If the water enters the player carelessly, please don't starting up it, so that to avoid the player to be damaged.
- Do not disconnect the USB cable while reading or transmitting files. Otherwise, the files may be destroyed or deleted, or make the machine can't be used normally.
- The record hole is hiding in the place of articulation, please pay attention to waterproof.
- The Flash Memory has reading and writing longevity. Usually, it is no need to use computer to format the player's disk at each time. Please backup the important files first before you format the disk. All of the files will be deleted when after the formatting is finished.
- This player is only support MP3 (MPEG1/2 Layer3) music, if the download file is not MP3 (MPEG1/2 Layer3) music or destroyed file, the green light will flash and have not voice, please delete the file which can not be played in this condition.
- During using the player, if have the machine dead or abnormality phenomenon, causing can't normal usage, please connect with computer or charging power, and the player will reset automatically.