

Hybrid WRX intercooler KIT fitting

Installation instruction



Parts list

Piping, silicon hose and super clamp kit



Note

Picture may be different than the actual product!
It is a reference guide only!

1. Remove the STD intercooler



2. Start connecting the turbo outlet pipe




3. After connecting the under air filter pipe, make sure the clamps are loose for adjustment.



4. Bend the shaded area for silicon reducer hose



5. Drill 2 x 8mm holes apart from the centre to bolt on the Hybrid intercooler

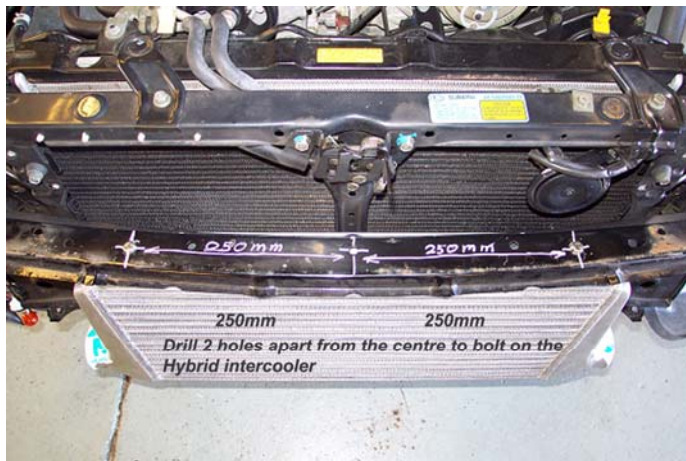


6. Install the bottom bracket



7. Cut or bend the shaded area for the pipe passage



8. Install the lower hose clamp before pushing the top pipe on

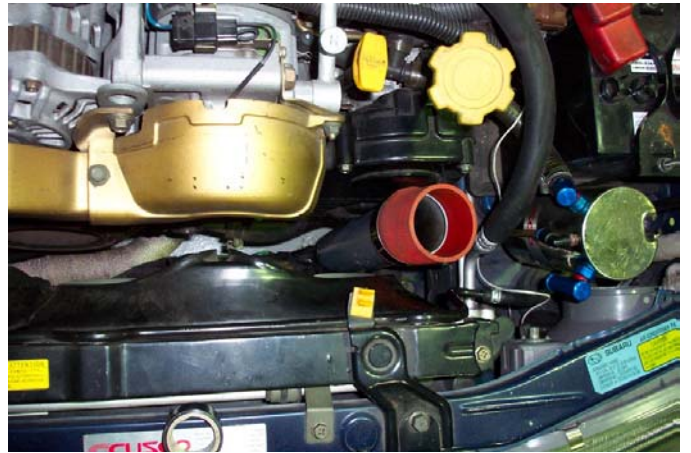

9. Connect the top pipe and install a blow off valve



10. Finished

