


Instructions for Fog Auxiliary Lights R 1200 GS



At first please dismantle the R 1200 GS „nose“ (6 bolts) . Now assemble the brackets with the lamps, see the pictures.




Assemble the relay and stick on the Autoswitch. Black wire from Autoswitch connect to ground. The wire with fuse to plus battery and two white cable to the lamps laying.

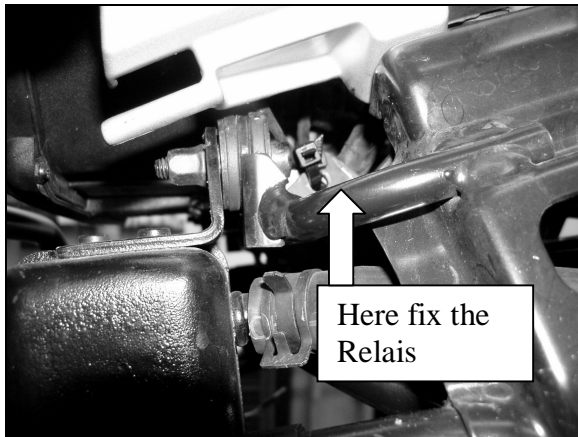


Disconnect the connector from BMW lamp and implement the yellow wire from the bagside and affilate it with the white wire. I propos braze the wires for best connection.

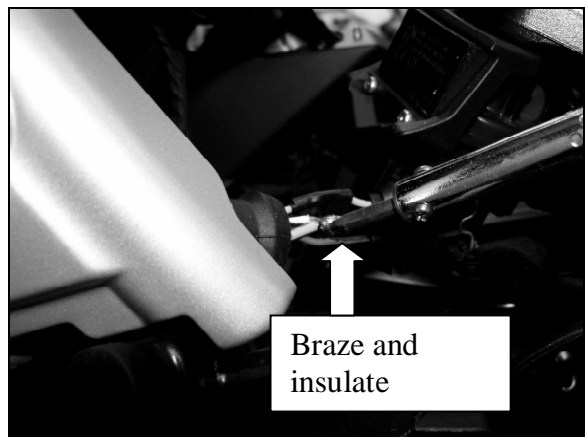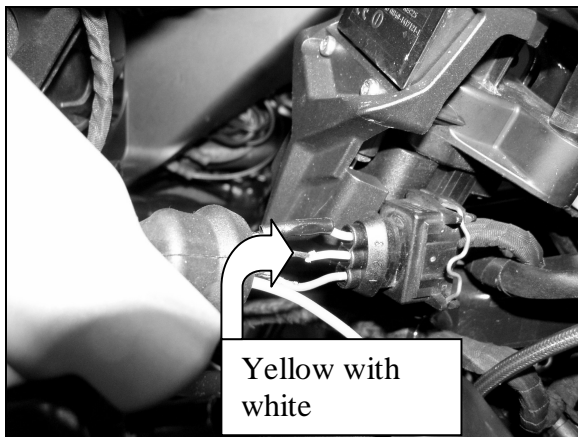

The red wire from autoswitch connect to the parklight bulb look the fotos.

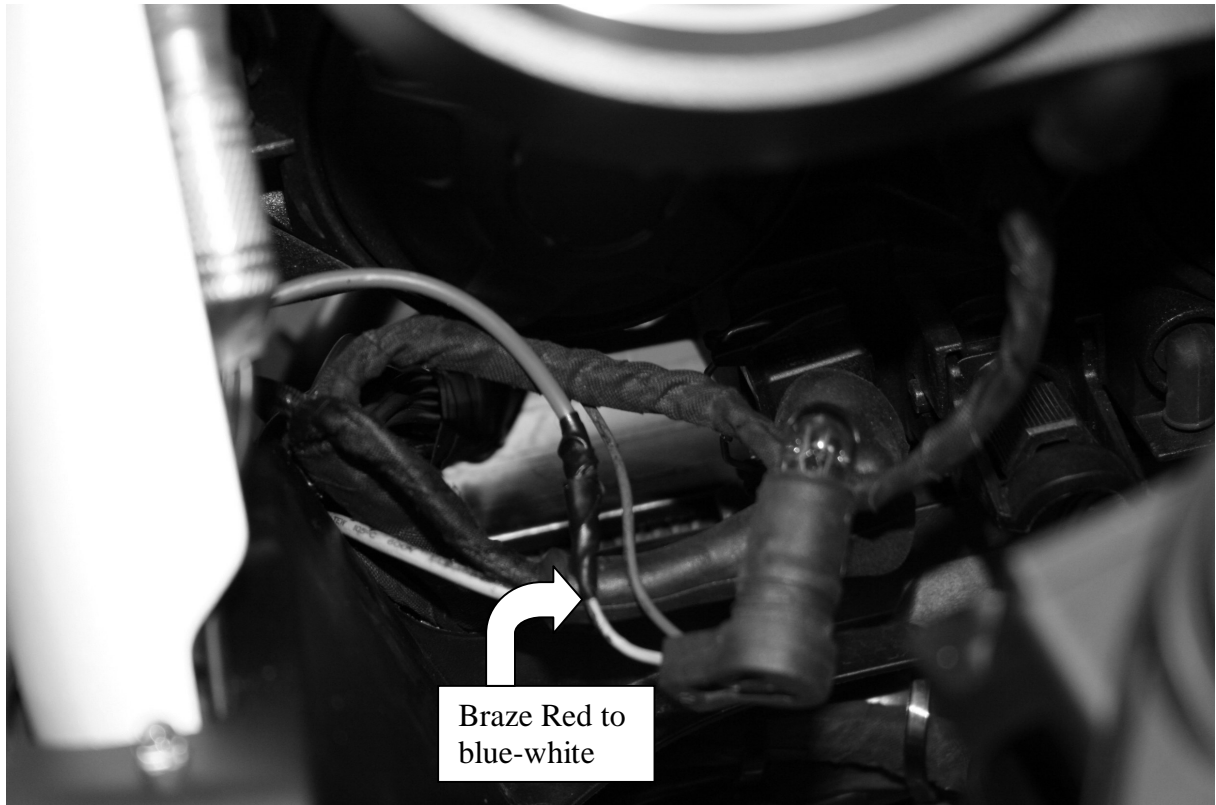

The LED assamble anywhere you want, the foto behind is an example for a good place.

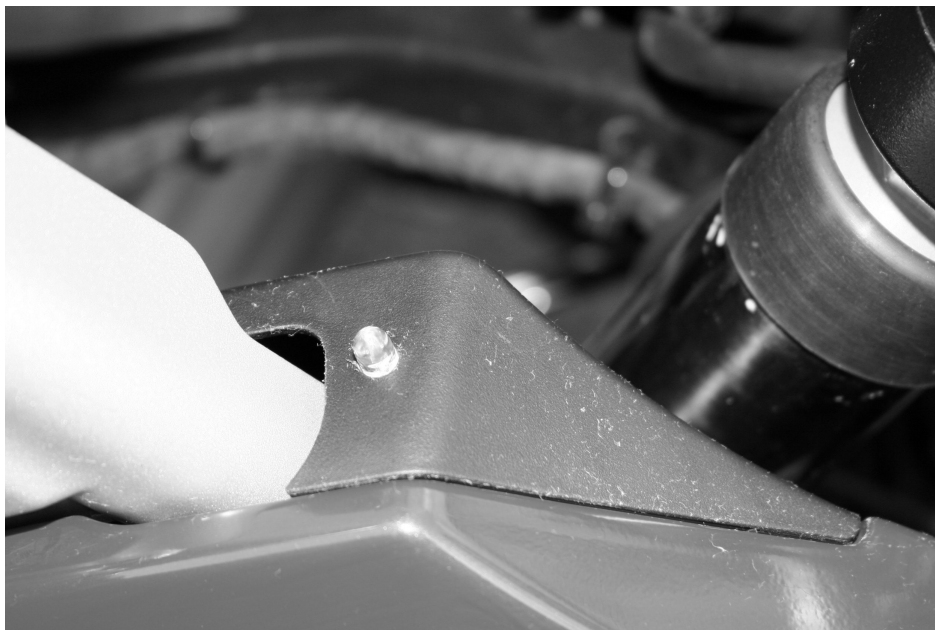

**Please excuse me, my English is not good. I hope you understand what I mean.
Do you have any questions send me a email and I give my best to help you.**

mail@motoboZZo.com

MotoBoZZo / Johannes BoZZo